


OLYMPUS

DIGITAL CAMERA
APPAREIL PHOTO NUMÉRIQUE
CÂMARA DIGITAL

TG-860

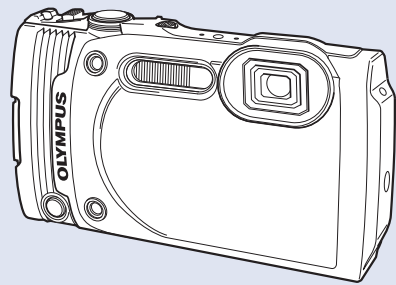

EN Quick Start Guide

FR Guide de démarrage rapide

ES Guía rápida de inicio

WCT78201
1AG6P1P6930-

Checking the contents of the box / Vérifier le contenu de la boîte / Comprobación de los contenidos de la caja

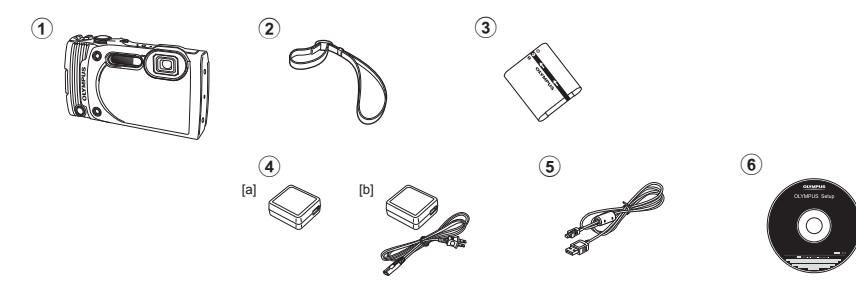


Table with 3 columns: EN, FR, ES. Lists items included in the box such as Digital camera, Strap, Lithium Ion Battery, USB-AC adapter, USB cable, and OLYMPUS Setup CD-ROM.

EN Other accessories not shown: Warranty card
Contents may vary depending on purchase location.

FR Autres accessoires non illustrés: Carte de garantie
Le contenu est susceptible de varier en fonction du lieu d'achat.

ES Otros accesorios no mostrados: Tarjeta de garantía
Los contenidos pueden variar dependiendo del lugar de la compra.

date of issue 2014.12.

OLYMPUS

http://www.olympusamerica.com/

OLYMPUS IMAGING AMERICA INC.

3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A. Phone 484-896-5000
Technical Support (U.S.A. / Canada)
Our phone customer support is available from 9 am to 8 pm (Monday to Friday) ET
http://www.olympusamerica.com/support
Phone customer support: Phone 1-800-260-1825 (Toll-Free)

Service Centers


- List of service centers for the Olympus TG-860 in various countries including USA, Canada, Argentina, Brazil, Colombia, Costa Rica, Mexico, Panama, Peru, Uruguay, and Venezuela.

EN


Thank you for purchasing an Olympus digital camera. Please read these instructions carefully. The camera you purchased is provided with the CD-ROM Instruction Manual. For detailed information on all features and Provisions of warranty, please refer to the CD-ROM. Adobe Reader is required to view the Instruction Manual.

Inserting and removing the battery and card

- Follow Steps 1, 2 and 3 to open the battery/card compartment/connector cover.
Do not touch the metallic parts of the card directly.
Always use the specified cards with this camera.

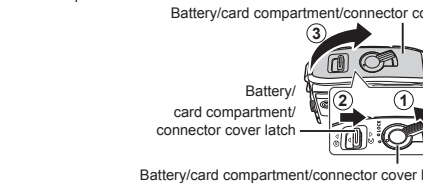


- Insert the battery while sliding the battery lock knob in the direction of the arrow.
If you insert the battery in the wrong direction, the camera is not turned on. Be sure to insert it in the correct direction.
Slide the battery lock knob in the direction of the arrow to unlock, and then remove the battery.

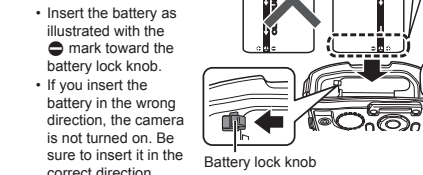


WCT78201
1AG6P1P6930-

Inserting the card straight until it clicks into place.

- Do not touch the metallic parts of the card directly.
Always use the specified cards with this camera.

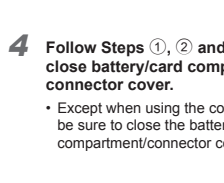

- Follow Steps 1, 2 and 3 to close battery/card compartment/connector cover.
Except when using the connector, be sure to close the battery/card compartment/connector cover.

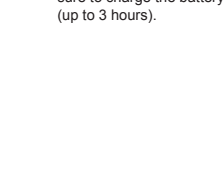


WCT78201
1AG6P1P6930-

FR

Merci d'avoir acheté un appareil photo numérique Olympus. Veuillez lire attentivement ces instructions. L'appareil photo que vous avez acheté est livré avec le manuel d'instructions sur CD-ROM. Pour des informations détaillées sur toutes les caractéristiques et les conditions d'obtention de la garantie, reportez-vous au CD-ROM. Adobe Reader est requis pour afficher le manuel d'instructions.

Insertion et retrait de la batterie et de la carte

- Suivez les étapes 1, 2 et 3 pour ouvrir le couvercle de la batterie/logement de carte/connecteur.
Éteignez l'appareil photo avant d'ouvrir le couvercle de la batterie/logement de carte/connecteur.

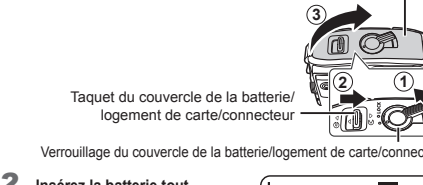


- Insérez la batterie tout en faisant glisser la touche de verrouillage de la batterie dans le sens de la flèche.
Insérez la batterie en orientant le symbole de la même côté que la touche de verrouillage de la batterie.
L'appareil photo ne s'allume pas si vous insérez la batterie dans le mauvais sens.
Faites glisser la touche de verrouillage de la batterie dans le sens de la flèche pour déverrouiller, puis retirez la batterie.




WCT78201
1AG6P1P6930-

Insérez la carte bien droit jusqu'à ce qu'elle se mette en place avec un léger bruit sec.

- Ne touchez pas directement les parties métalliques de la carte.
Utilisez toujours les cartes spécifiées avec cet appareil photo. N'insérez pas d'autres types de carte mémoires.

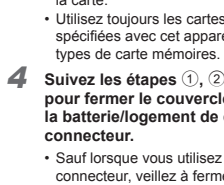

- Suivez les étapes 1, 2 et 3 pour fermer le couvercle de la batterie/logement de carte/connecteur.
Sauf lorsque vous utilisez le connecteur, veillez à fermer le couvercle de la batterie/logement de carte/connecteur.

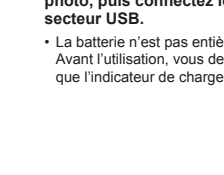


WCT78201
1AG6P1P6930-

ES


Le agradecemos que haya adquirido una cámara digital Olympus. Lea atentamente estas instrucciones. La cámara que ha adquirido incluye el manual de instrucciones en CD-ROM. Para más información sobre todas las características y las condiciones de la garantía, consulte el CD-ROM. Se necesita Adobe Reader para poder visualizar el manual de instrucciones.

Insertión y extracción de la batería y de la tarjeta

- Siga los pasos 1, 2 y 3 para abrir la tapa del compartimento de la batería/tarjeta/connecteur.
Antes de abrir la tapa del compartimento de la batería/tarjeta/connecteur, apague la cámara.

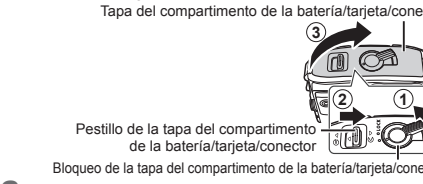


- Insértela recta hasta que encaje en su posición con un click.
No toque directamente las partes metálicas de la tarjeta.
Utilice siempre las tarjetas especificadas con esta cámara. No inserte otros tipos de tarjetas.

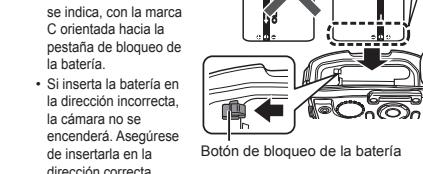


WCT78201
1AG6P1P6930-

Insérela recta hasta que encaje en su posición con un click.

- No toque directamente las partes metálicas de la tarjeta.
Utilice siempre las tarjetas especificadas con esta cámara. No inserte otros tipos de tarjetas.

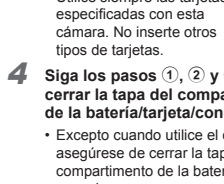


- Siga los pasos 1, 2 y 3 para cerrar la tapa del compartimento de la batería/tarjeta/connecteur.
Excepto cuando utilice el conector, asegúrese de cerrar la tapa del compartimento de la batería/tarjeta/connecteur.

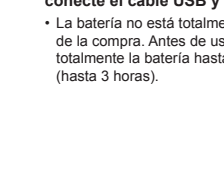

WCT78201
1AG6P1P6930-

ES


Le agradecemos que haya adquirido una cámara digital Olympus. Lea atentamente estas instrucciones. La cámara que ha adquirido incluye el manual de instrucciones en CD-ROM. Para más información sobre todas las características y las condiciones de la garantía, consulte el CD-ROM. Se necesita Adobe Reader para poder visualizar el manual de instrucciones.

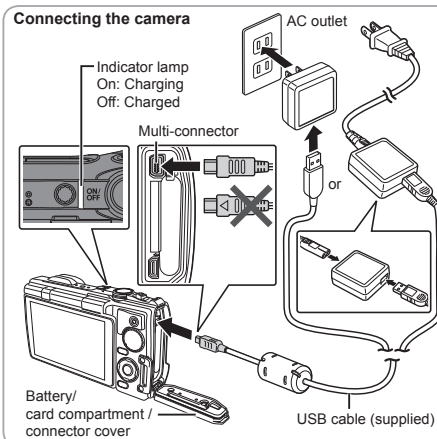

- Never use any cable other than supplied or Olympus-designated USB cable. This may cause smoking or burning.
The included F-2AC USB-AC adapter (hereafter referred to as USB-AC adapter) differs depending on the region where you purchased the camera. If you received a plug-in type USB-AC adapter, plug it directly into AC outlet.
If the indicator lamp does not light, check the USB cable and USB-AC adapter connections.
If "No Connection" is displayed on the back monitor, disconnect the USB cable and [Storage] (USB Connection) before reconnecting the cable again.

Turning on the camera and making the initial settings

- Press the ON/OFF button to turn on the camera, press the arrow pad to select your language and press the button.
Press the arrow pad of the arrow pad to select the year for [Y].
Press the arrow pad of the arrow pad to save the setting for [Y].
As in Steps 2 and 3, press the arrow pad of the arrow pad to set [M] (month), [D] (day), [Time] (hours and minutes), and [Y/M/D] (date order), and then press the button.
For precise time setting, press the button as the time signal strikes 00 seconds.

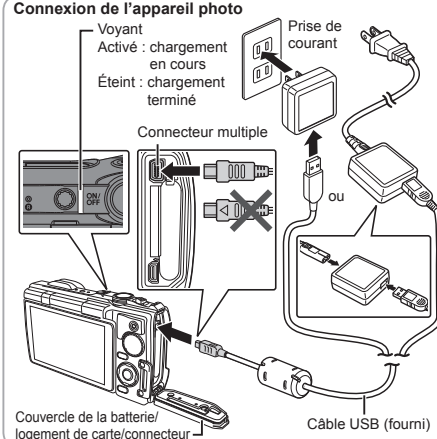

- N'utilisez jamais un autre câble que celui fourni ou qu'un câble USB Olympus. Cela pourrait entraîner l'apparition de fumées ou des brûlures.
L'adaptateur secteur USB F-2AC fourni (appelé ci-après adaptateur secteur USB) varie suivant la région où l'appareil photo est acheté. Si vous avez acquis un adaptateur secteur USB de type enfichable, branchez-le directement dans une prise de courant.
Si le voyant ne s'allume pas, vérifiez les connexions du câble USB et de l'adaptateur secteur USB.
Si "Non Connecté" s'affiche sur l'écran arrière, déconnectez le câble USB et réglez [Normal] dans [Connexion USB] avant de reconnecter le câble.

Mise sous tension de l'appareil photo et réglages initiaux

- Appuyez sur la touche ON/OFF pour mettre sous tension l'appareil photo, appuyez sur la molette de défilement pour sélectionner votre langue, puis appuyez sur la touche.
Appuyez sur la molette de défilement pour sélectionner l'année pour [A].
Appuyez sur la molette de défilement pour enregistrer le paramètre pour [A].

- Use the arrow pad to select the time zone and then press the button.
Use the arrow pad to turn daylight saving time ([Summer] on or off).

Taking photographs

- Press the ON/OFF button to turn on the camera. When the camera is turned on, the monitor will turn on.
Set the mode dial to P. In mode P, the camera automatically adjusts shutter speed and aperture in response to subject brightness.
Press the shutter button halfway down to focus. The camera was unable to focus if the AF target mark flashes red. Try focusing again.
The shutter speed and aperture value are displayed in red if the camera is unable to achieve optimal exposure.
To take the picture, gently press the shutter button all the way down while being careful not to shake the camera.

Viewing photographs (Playing back images)

- Turn on the camera. Press the button.
Your most recent photograph is displayed.
Press the arrow pad to select an image.

Recording movies

- Press the movie button to start recording.
Press the movie button again to stop recording.

Movie playback

- Display the image you want to erase and press the button.
To erase a movie, select the movie to erase and press the button.
Press the arrow pad to select [Erase], and press the button.

Erasing images during playback

- Display the image you want to erase and press the button.
To erase a movie, select the movie to erase and press the button.
Press the arrow pad to select [Erase], and press the button.

Flash

- Press the button to display options.
Use the arrow pad to choose a flash mode and press the button.

Connecting the camera to a smartphone

By connecting to a smartphone through this camera's wireless LAN function and using the specified app, you can enjoy even more features during and after shooting.
Things you can do with the specified app, OLYMPUS Image Share (OI.Share)
Camera image transfer to a smartphone
You can load images in the camera to a smartphone.
Remote shooting from a smartphone
You can remotely operate the camera and shoot using a smartphone.
Beautiful image processing
You can apply art filters and add stamps on images loaded to a smartphone.
Addition of GPS tags to camera images
You can add GPS tags to camera images simply by transferring the GPS log saved on the smartphone to the camera.

For details, visit the address below:
http://oishare.olympus-imaging.com/
If using the wireless LAN function in a country outside the region where the camera was purchased, there is a risk that the camera will not conform to the wireless communication regulations of that country. Olympus will not be held responsible for any failure to meet such regulations.

Using GPS function (GPS Settings)

- Select [GPS Settings] in the Settings Menu 3 and press the button.
Select [GPS] and press the button.
Select [On] and press the button.


GPS flashes during measurement. When the position measurement ends, GPS will appear and the position information will be displayed.
In certain countries and regions it may be illegal to acquire position information without prior application to the government. Because of this, in certain sales regions, the camera may be set up not to display position information. When taking the camera abroad, be aware that some regions or countries may have laws regulating the use of this function. Be sure to abide by all local laws.
Turn GPS off when on board aircraft and in other locations in which the use of GPS devices is prohibited.

Important information about water and shock resistant features

Before Use:
Check the camera for foreign material including dirt, dust or sand.
Firmly close the battery/card compartment/connector cover latch and LOCK knob.
Do not open the battery/card compartment/connector cover with wet hands, while under water, or in a damp or dusty environment (e.g. beach).

After Use:
Be sure to wipe off any excess water or debris after using the camera under water.
After the camera is used under seawater, immerse the camera in a bucket containing fresh water for about 10 minutes (with the battery/card compartment/connector cover firmly closed). Do not leave the camera without cleaning for more than 60 minutes. This will cause damage to the camera's appearance and/or deteriorate water resistance.

When opening the battery/card compartment/connector cover, take care not to allow water drops to enter the camera. If any water drops are found on the inner side of the cover, be sure to wipe them off before using the camera.
Foreign materials may be attached to the camera when using the camera in conditions with foreign materials such as dirt, dust or sand. If you continue to use the camera in such conditions, it could cause damage to the camera.
To avoid such damage, wash the camera using the following method.

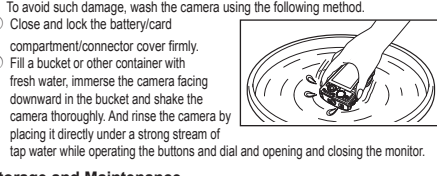

Storage and Maintenance

- Do not leave the camera in an environment at high temperature (40°C (104°F) or more) or at low temperature (-10°C (14°F) or less). Failure to do so may break down water resistance.
Do not use chemicals for cleaning, rust prevention, anti-fogging, repairing, etc. Failure to do so may break down water resistance.
Prolonged exposure to water will cause damage to the camera's appearance and/or deteriorate water resistance.
In order to preserve the water resistant packing, as with any underwater housing, it is recommended that the waterproof packing (and seals) are replaced annually. Only the Olympus distributors or service stations where the waterproof packing can be replaced. Visit Olympus website for your local area.
The included accessories (e.g., the USB-AC adapter) do not offer shock or water resistance.

© 2014 OLYMPUS IMAGING CORP.
Printed in Indonesia

