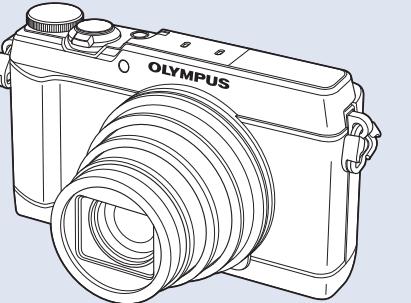
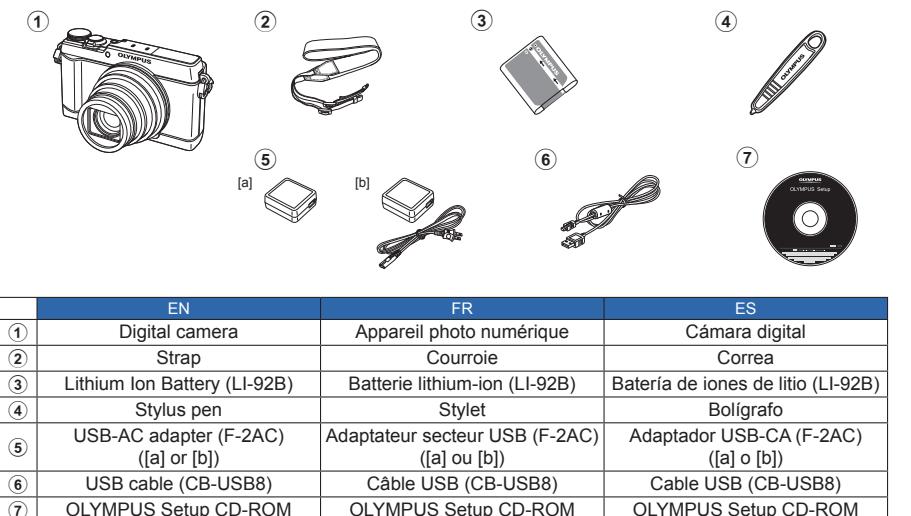


OLYMPUS**DIGITAL CAMERA
APPAREIL PHOTO NUMÉRIQUE
CÁMARA DIGITAL****SH-1****EN Quick Start Guide****FR Guide de démarrage rapide****ES Guía rápida de inicio**WC377901
1AG6P1P6830-1**Checking the contents of the box / Vérifier le contenu de la boîte / Comprobación de los contenidos de la caja**

EN Other accessories not shown: Warranty card.

Contents may vary depending on purchase location.

FR Autres accessoires non illustrés: Carte de garantie.

Le contenu est susceptible de varier en fonction du lieu d'achat.

ES Otros accesorios no mostrados: Tarjeta de garantía.

Los contenidos pueden variar dependiendo del lugar de la compra.

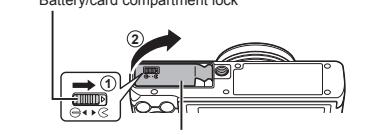
OLYMPUS

http://www.olympusamerica.com/

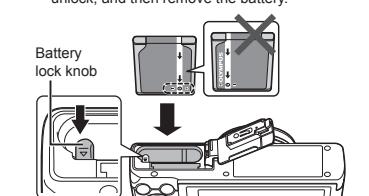
OLYMPUS IMAGING AMERICA INC.3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A., Tel: 484-896-5000
Technical Support (U.S.A. / Canada)
24/7 online automated help:
http://www.olympusamerica.com/support
Phone customer support:
Tel: 1-800-260-1625 (Toll-free)**Service Centers**U.S.A.: Pennsylvania Olympus Imaging America Inc.
3500 Corporate Parkway
P.O. Box 610
Center Valley, PA 18034-0610
Phone: (484) 896-5000
Repair info: www.olympusamerica.com/repairCanada: Trintek Electronics Inc.
1000 Lakeside Drive, Unit 20
Mississauga Ontario
Canada L5L 4J3
Tel: (905) 624-1625Argentina: LAM Service S.A.
Súpercalle 199 2 piso oficina 205 (C1008AAD)
Cuidad Autónoma de Buenos Aires - Argentina
Horario de atención: Lunes a Viernes de 9 a.m. a 14 a.m.
Phone: (011) 4326-8596
E-mail: info@lamservice.com.ar
www.lamservice.com.arBrazil: Olympus Optical do Brasil Ltda.
SAC: 0800 72 66 72 0
E-mail: brasil@olympus.com.brColombia: CV Tronica LTDA
Calle 68 No 12-32, Bogotá
Tel: (571) 372-048-1573
Tel: 1-800-375-6308
Fax: (571) 348-1574
E-mail: cvtronica@btinet.coPanama: TECNOTEK
Centro Comercial Multimax
Via Ricardo J. Alfaro, Local #8
Apartado 0531-00333 Bethania,
Panamá
Tel: 507-279-0400
Fax: 507-279-8479
E-mail: tecnotek@btinet.comCV Tronica LTDA
No 24-45 Edificio 215
C.C. Intercentro, Bogotá
Tel: (571) 284-4365CV Tronica LTDA
Av. 95 #10-100 Oficina 22 Piso 2
Local 5, Bogotá
Tel: (571) 337-4540 - 619 1682CV Tronica LTDA
Cra 48 No 10 - 45
Centro Empresarial Monterrey
Sotano, Interior 3
Medellín
Tel: 571-444-0229
Tel: 301 552 7537Peru: E. LAU SI (Headquarters)
Av. Oscar R. Benavides 4707
Edificio 1000, Oficina 1001
Teléfono: (511) 619-1677 (511) 619-1698
Fax: (511) 628-8535
E-mail: service@laus.comE. LAU SI
Av. Carlos Izquierdo 1334,
Los Olivos - Lima, Peru
Teléfono: (511) 652-5303
Fax: (511) 628-8535
E-mail: servicio@laus.comUruguay: Fotocamara S.R.L.
Rondan 1400, 1470 Montevideo
Tel: (02) 900-0000 Fax: (02) 900-9430
E-mail: FOTOCAM@ADINET.COM.UY**EN**Thank you for purchasing an Olympus digital camera.
Please read these instructions carefully.The camera you purchased is provided with the CD-ROM Instruction Manual.
For detailed information on all features and Provisions of warranty, please refer to the CD-ROM.
Adobe Reader is required to view the Instruction Manual.**Inserting and removing the battery and card****1** Follow Steps ① and ② to open the battery/card compartment cover.

- Turn off the camera before opening the battery/card compartment cover.

Battery/card compartment lock

**2** Insert the battery while sliding the battery lock knob in the direction of the arrow.

 
- Insert the battery as illustrated with the mark toward the battery lock knob.
- Slide the battery lock knob in the direction of the arrow to unlock, and then remove the battery.

**3** Insert the card straight until it clicks into place.

 
- Always use the specified cards with this camera. Do not insert other types of memory cards.

• Do not touch the metallic parts of the card directly.

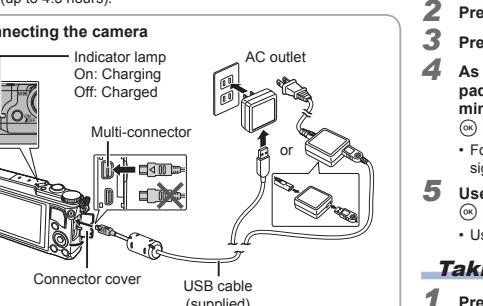
Write-protect switch

**4** Follow Steps ① and ② to close battery/card compartment cover.

- When using the camera, be sure to close the battery/card compartment cover.

**Charging the battery****1** Connect the USB cable and USB-AC adapter to the camera and charge the battery.

• The battery is not fully charged at shipment. Before use, be sure to charge the battery until the indicator lamp turns off (up to 4.5 hours).

**2** Never use any cable other than supplied or Olympus-designed USB cable. This may cause smoking or burning.

• The included F-2AC USB-AC adapter (hereafter referred to as USB-AC adapter) differs depending on the region where you purchased the camera. If you received a plug-in type USB-AC adapter, plug it directly into AC outlet.

• If the indicator lamp does not light, check the USB cable and USB-AC adapter connections.

• If "No Connection" is displayed on the back monitor, disconnect the USB cable and set [Storage] in [USB Connection] before connecting the cable again.

3 As in Steps 2 and 3, press $\Delta \nabla \leftarrow \rightarrow$ of the arrow pad to set [M] (month), [D] (day), [Time] (hours and minutes), and [Y/M/D] (date order), and then press the \odot button.• For precise time setting, press the \odot button as the time signal strikes 00 seconds.**4** Use $\leftarrow \rightarrow$ to select the time zone and then press the \odot button.• Use $\Delta \nabla$ to turn daylight saving time ([Summer]) on or off.• Use $\Delta \nabla$ to turn daylight saving time ([Summer]) on or off.**5** To take the picture, gently press the shutter button all the way down while being careful not to shake the camera.

• You can also take photographs using the touch screen.

Turning on the camera and making the initial settings**1** Press the ON/OFF button to turn on the camera, press $\Delta \nabla \leftarrow \rightarrow$ of the arrow pad to select your language and press the \odot button.

• Your most recent photograph is displayed.

• Press $\leftarrow \rightarrow$ to select an image.**Recording movies****1** Press the \odot (movie) button to start recording.**2** Press the \odot (movie) button again to stop recording.**Movie playback**Select a movie, and press the \odot button.• Turn the zoom lever to the T side to display the movie index. Use $\Delta \nabla \leftarrow \rightarrow$ to select the frame to start playback.**Erasing images during playback****1** Press the ON/OFF button to turn on the camera.

When the camera is turned on, the monitor will turn on.

2 Set the mode dial to **P**.In mode **P**, the camera automatically adjusts shutter speed and aperture in response to subject brightness.**3** Frame the shot.**4** Press the shutter button halfway down to focus.

The camera was unable to focus if the AF target mark flashes red. Try focusing again.

• The shutter speed and aperture value are displayed in red if the camera is unable to achieve optimal exposure.

5 To take the picture, gently press the shutter button all the way down while being careful not to shake the camera.

• You can also take photographs using the touch screen.

Using Wi-Fi function

Using the wireless LAN functions on the camera, you can connect to a smartphone with Wi-Fi connectivity to view or transfer images on your smartphone, and to operate the camera by remote control.

The position information will be added to images on the memory card.

To use this function, you must have the relevant app installed on the smartphone.

http://oishare.olympus-imaging.com/

Viewing photographs (Playing back images)

Turn on the camera.

Press the \square button.

• Your most recent photograph is displayed.

• Press $\leftarrow \rightarrow$ to select an image.**Taking photographs****1** Press the ON/OFF button to turn on the camera.

When the camera is turned on, the monitor will turn on.

2 Set the mode dial to **P**.In mode **P**, the camera automatically adjusts shutter speed and aperture in response to subject brightness.**3** Frame the shot.**4** Press the shutter button halfway down to focus.

The camera was unable to focus if the AF target mark flashes red. Try focusing again.

• The shutter speed and aperture value are displayed in red if the camera is unable to achieve optimal exposure.

5 To take the picture, gently press the shutter button all the way down while being careful not to shake the camera.

• You can also take photographs using the touch screen.

Using Wi-Fi function

Using the wireless LAN functions on the camera, you can connect to a smartphone with Wi-Fi connectivity to view or transfer images on your smartphone, and to operate the camera by remote control.

The position information will be added to images on the memory card.

To use this function, you must have the relevant app installed on the smartphone.

http://oishare.olympus-imaging.com/

Recording movies**1** Press the \odot (movie) button to start recording.**2** Press the \odot (movie) button again to stop recording.**Movie playback**Select a movie, and press the \odot button.• Turn the zoom lever to the T side to display the movie index. Use $\Delta \nabla \leftarrow \rightarrow$ to select the frame to start playback.**Erasing images during playback****1** Press the ON/OFF button to turn on the camera.

When the camera is turned on, the monitor will turn on.

2 Set the mode dial to **P**.In mode **P**, the camera automatically adjusts shutter speed and aperture in response to subject brightness.**3** Frame the shot.**4** Press the shutter button halfway down to focus.

The camera was unable to focus if the AF target mark flashes red. Try focusing again.

• The shutter speed and aperture value are displayed in red if the camera is unable to achieve optimal exposure.

5 To take the picture, gently press the shutter button all the way down while being careful not to shake the camera.

• You can also take photographs using the touch screen.

Prise de photos (Photographie)**1** Appuyez sur la touche ON/OFF pour allumer l'appareil photo.

Lorsque l'appareil photo est mis sous tension, l'écran s'allume.

Réglez la molette de mode sur P.

En mode P, l'appareil photo ajuste automatiquement la vitesse d'obturation et l'ouverture par rapport à la luminosité du sujet.

SAFETY PRECAUTIONS

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK).

NO USER-SERVICEABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED OLYMPUS SERVICE PERSONNEL

An exclamation mark enclosed in a triangle alerts you to important operating and maintenance instructions in the documentation provided with the product.

If the product is used without observing the information given under this symbol, serious injury or death may result.

DANGER If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or loss of valuable data may result.

WARNING! TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK, NEVER DISASSEMBLE, EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.

General Precautions

Read All Instructions — Before you use the product, read all operating instructions. Save all manuals and documentation for future reference.

Cleaning — Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product.

Attachments and accessories — For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.

Water and Moisture — For precautions on products with weatherproof designs, read the weatherproofing sections.

Location — To avoid damage to the product, mount the product securely on a stable tripod, stand, or bracket.

Power Source — Connect this product only to the power source indicated.

Lightning — If a lightning storm occurs while using a USB-AC adapter, remove it from the wall outlet immediately.

Foreign Objects — To avoid personal injury, never insert a metal object into the product.

Heat — Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers.

Handling the Camera

WARNING • Do not use the camera near flammable or explosive gases.

• Do not use the flash and LED (including AF illuminator) on people (infants, small children, etc.) at close range.

You must be at least 1 m (3 ft.) away from the faces of your subjects. Flashing too close to the subject's eyes could cause temporary or permanent eye damage.

• Keep young children and infants away from the camera.

• Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury:

• Becoming tangled in the camera strap, causing strangulation.

• Accidentally swallowing the battery, cards or other small parts.

• Accidentally firing the flash into their own eyes or those of another child.

• Accidentally being injured by the moving parts of the camera.

• Do not look at the sun or strong lights with the camera.

• Do not use or store the camera in dusty or humid places.

• Use SD/SDHC/SDXC memory cards or Eye-Fi cards only. Never use other types of card.

If you accidentally insert another type of card into the camera, contact an authorized distributor or service center. Do not try to remove the card by force.

• If you find that the USB-AC adapter is extremely hot or notice any unusual odors, noise, or smoke around it, unplug the power plug from wall outlet immediately and stop using it. Then, contact an authorized distributor or service center.

ATTENTION

• Stop using the camera immediately if you notice any unusual odors, noise, or smoke around it.

• Never hold or operate the camera with bare hands, which may cause fire or burn your hands.

• Do not leave the camera in places where it may be subjected to extremely high temperatures.

• Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire. Do not use the camera or USB-AC adapter if it is covered (such as a blanket). This may cause overheating, burning, or exploding.

• Do not connect terminals with any metallic objects.

• Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal objects such as jewelry, pins, coins, fasteners, etc.

The short circuit may cause overheating, exploding, or burning, which may burn or damage you.

• Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.

• To prevent causing battery leaks or damaging their terminals, never attempt to disassemble a battery or damage it in any way, solder, etc.

If battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention immediately.

• Always store batteries out of the reach of small children and pets. They may accidentally swallow a battery, seek medical attention immediately.

• If you cannot remove the battery from the camera, contact an authorized distributor or service center. Do not try to remove the battery by force.

Damage to the battery exterior (scratches, etc.) may produce heat or an explosion.

• When the camera contains metal parts, overheating can result in a battery leak. Pay attention to the following:

• When used for a long period, the camera will get hot. If you hold or touch the camera in this state, a low-temperature burn may be caused.

• In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environment. If you touch the camera's body, wear gloves when handling the camera in cold temperatures.

• Be careful with the strap.

• Be careful with the strap when you carry the camera. It could easily catch on stray objects and cause serious damage.

• Before transporting the camera, remove a tripod and all other non-Olympus accessories.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

Battery Handling Precautions

Follow these important guidelines to prevent batteries from leaking, overheating, burning, exploding, or causing electrical shorts or burns.

DANGER

• The camera uses a lithium ion battery specified by Olympus. Charge the battery with the specified USB-AC adapter or charger. Do not use any other USB-AC adapters or chargers.

• Never incinerate or heat batteries in microwaves, on hot plates, or in pressure cookers, etc.

• Never expose the battery to strong shocks or continuous vibration. This may cause overheating, burning, or exploding.

• Do not connect terminals with any metallic objects.

• Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal objects such as jewelry, pins, coins, fasteners, etc.

The short circuit may cause overheating, exploding, or burning, which may burn or damage you.

• Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.

• To prevent causing battery leaks or damaging their terminals, never attempt to disassemble a battery or damage it in any way, solder, etc.

If battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention immediately.

• Always store batteries out of the reach of small children and pets. They may accidentally swallow a battery, seek medical attention immediately.

• If you cannot remove the battery from the camera, contact an authorized distributor or service center. Do not try to remove the battery by force.

Damage to the battery exterior (scratches, etc.) may produce heat or an explosion.

• When the camera contains metal parts, overheating can result in a battery leak. Pay attention to the following:

• When used for a long period, the camera will get hot. If you hold or touch the camera in this state, a low-temperature burn may be caused.

• In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environment. If you touch the camera's body, wear gloves when handling the camera in cold temperatures.

• Be careful with the strap.

• Be careful with the strap when you carry the camera. It could easily catch on stray objects and cause serious damage.

• Before transporting the camera, remove a tripod and all other non-Olympus accessories.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

• Keep batteries dry at all times.

• To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.

• Insert the battery carefully as described in the operating instructions.

• If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.

• Do not use a battery if it is cracked or broken.

• Keep batteries dry at all times.

•