

Quick Start Guide SP-510UZ

Start Here

For more information, please refer to the Basic & Advanced Manuals or visit: www.olympusamerica.com/support


OLYMPUS IMAGING AMERICA INC.

© 2006 OLYMPUS IMAGING CORP.
Printed in Japan

1AG6P1P3138--


VH683701

1 Gather these items (box contents)

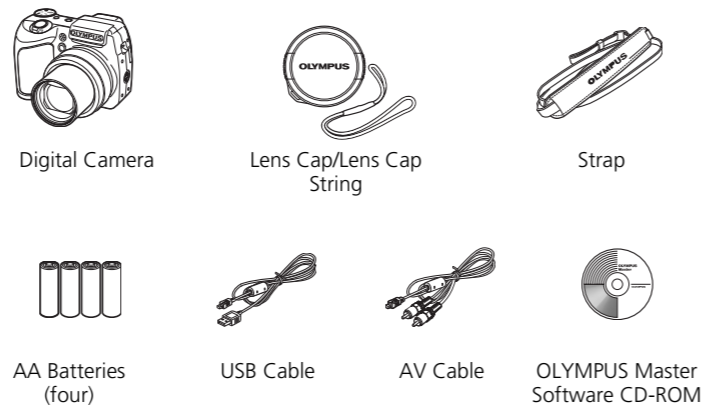


Items not shown: Advanced Manual, Basic Manual and warranty card.
Contents may vary depending on purchase location.

Attach the strap and the lens cap

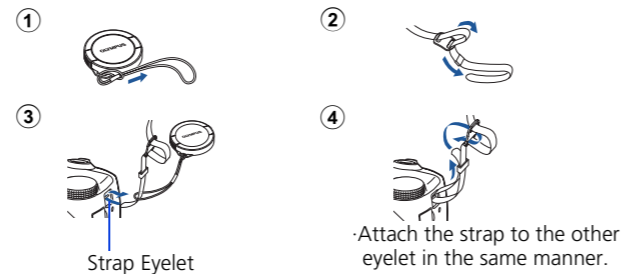

● Pull the strap tight so that it does not come loose.

2 Prepare the battery

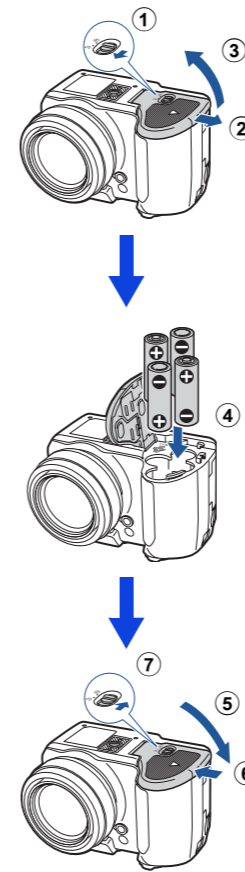


● For details on inserting an optional xD-Picture Card (hereinafter called the card), please refer to the Advanced Manual.

3 Turn the camera on

This explains how to turn on the camera in shooting mode.


a. Set the mode dial to **AUTO**.

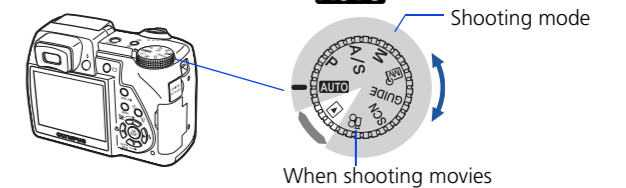

Still picture shooting modes

AUTO	Allows you to take pictures with full automatic settings.
P	The camera automatically sets the optimum aperture value and shutter speed.
A/S	Allows you to set the aperture manually. / Allows you to set the shutter speed manually.
M	Allows you to set both the aperture and shutter speed manually.
MY	Allows you to set each shooting function manually and use as your original shooting mode.
GUIDE	Allows you to set the target items by following the shooting guide displayed on the screen.
SCN	Allows you to shoot pictures by selecting a scene according to the shooting condition.


b. Press the **POWER** button.

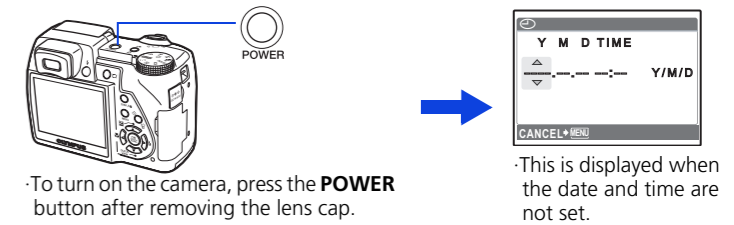

● To turn off the camera, press the **POWER** button once again.


4 Set date and time

About the date and time setting screen

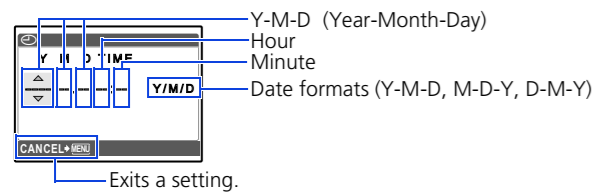


a. Press the **OK/FUNC** button and the **QUICK VIEW** button to select [Y].

• The first two digits of the year are fixed.

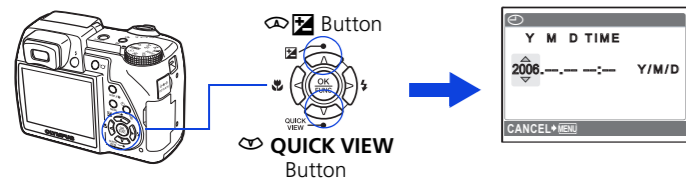

b. Press the **OK/FUNC** button.

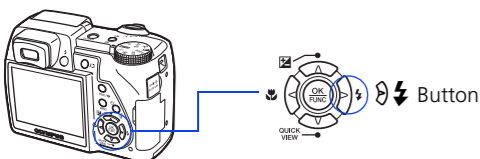

c. Press the **OK/FUNC** button and the **QUICK VIEW** button as in a. to select [M].

d. Press the **OK/FUNC** button.

e. Press the **OK/FUNC** button and the **QUICK VIEW** button to select [D].

f. Press the **OK/FUNC** button.

g. Press the **OK/FUNC** button and the **QUICK VIEW** button to select "hour", "minute".




• The time is displayed in the 24-hour format.

h. Press the **OK/FUNC** button.

i. Press the **OK/FUNC** button and the **QUICK VIEW** button to select [Y/M/D].

j. After all items have been set, press the **OK/FUNC** button.

• For precise time setting, press the **OK/FUNC** button as the time signal strikes 00 seconds.

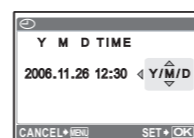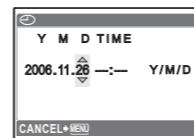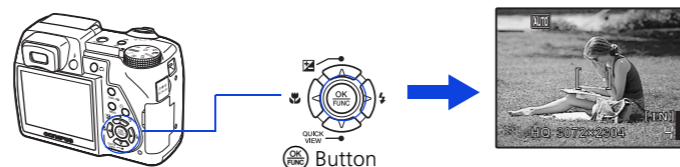


5 Shoot


a. Hold the camera.



b. Focus

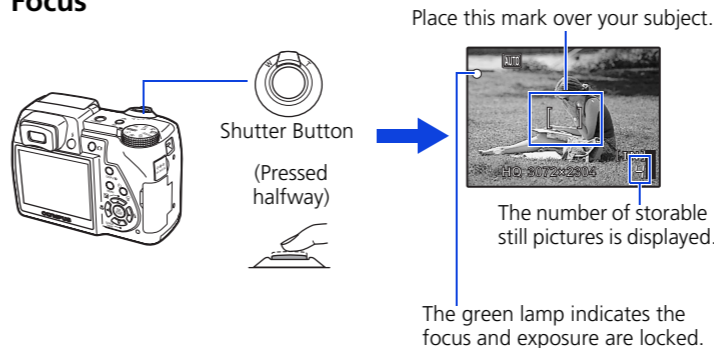


c. Shoot

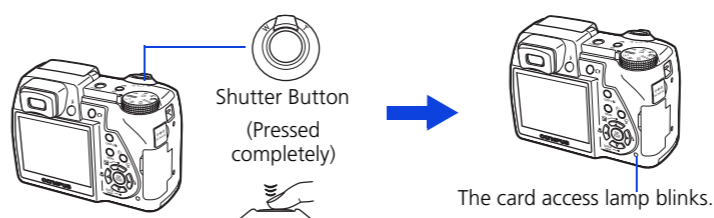

6 View pictures


a. Set the mode dial to **REVIEW**.

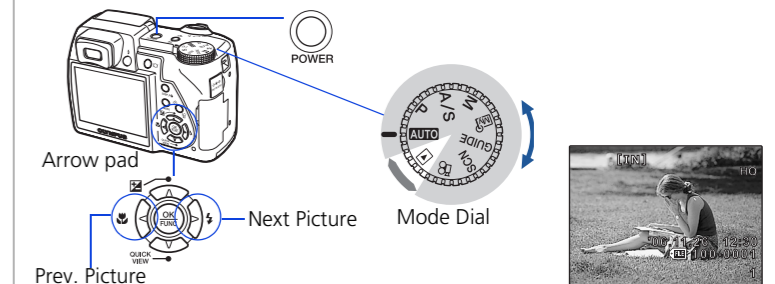

Erase pictures

a. As described in a. above, display the picture you want to erase.

b. Press the **OK/FUNC** button.

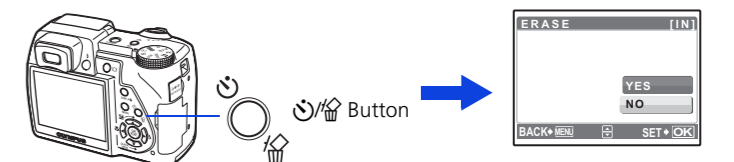

c. Press the **OK/FUNC** button to select [YES], and press the **OK/FUNC** button to erase the image.

