

# Quick Start Guide

## Stylus 1000

### Start Here

For more information, please refer to the Basic & Advanced Manuals or visit: [www.olympusamerica.com/support](http://www.olympusamerica.com/support)


OLYMPUS IMAGING AMERICA INC.

© 2006 OLYMPUS IMAGING CORP.  
Printed in Japan

1AG6P1P3252--


VH705401

## 1 Gather these items (box contents)

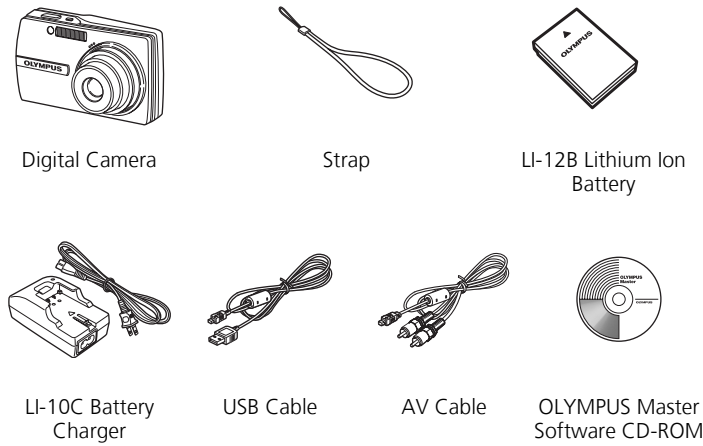

Items not shown: Advanced Manual (CD-ROM), Basic Manual, and warranty card. Contents may vary depending on purchase location.


### Attach the strap

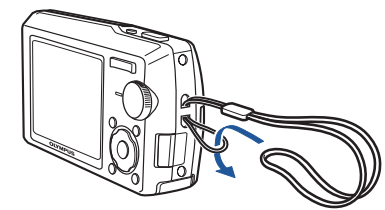

• Pull the strap tight so that it does not come loose.


## 2 Prepare the battery

### a. Charge the battery

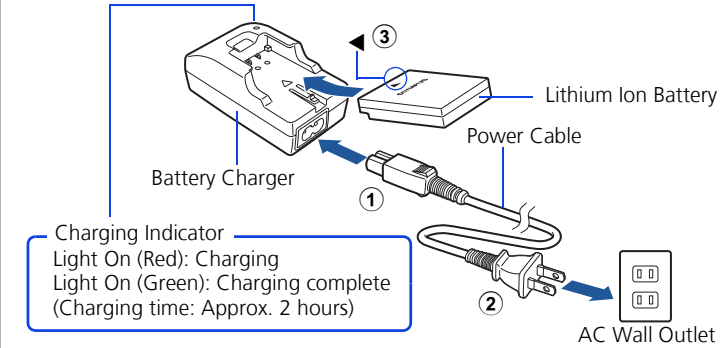

• Battery comes partially charged.

### b. Insert the battery in the camera

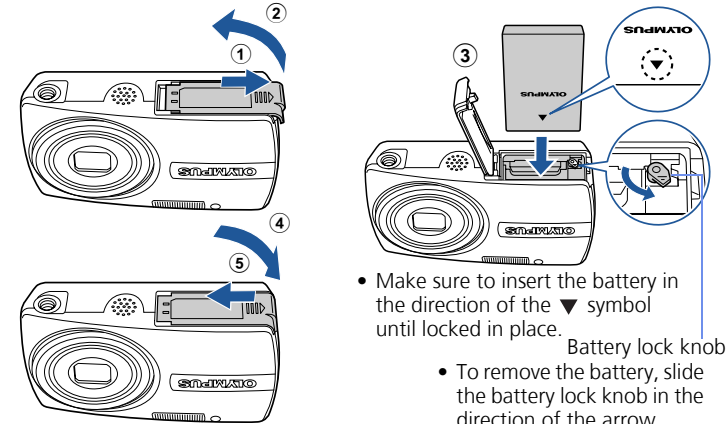


• For details on inserting an optional xD-Picture Card™, please refer to the advanced manual.

## 3 Turn the camera on

This explains how to turn on the camera in shooting mode.


### a. Set the mode dial to

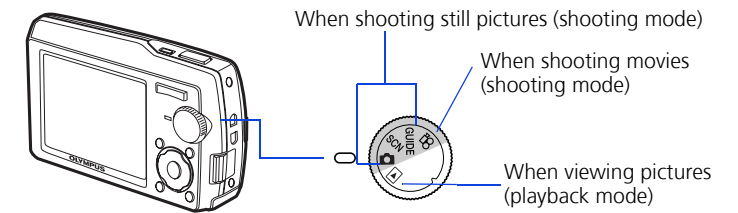

### Still picture shooting modes

- SCN** This function allows you to shoot with the camera's automatic settings. This function allows you to shoot pictures by selecting a scene according to the shooting condition.
- GUIDE** This function allows you to set the target items by following the shooting guide displayed on the screen.


### b. Press the POWER button

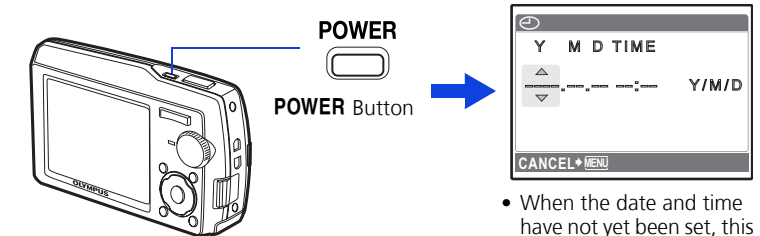

• To turn off the camera, press the **POWER** button once again.


### Hint

The directions of the arrow pad () is indicated with in the supplied instruction manual.

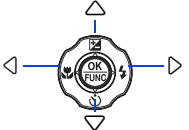


## 4 Set date and time


### About the date and time setting screen

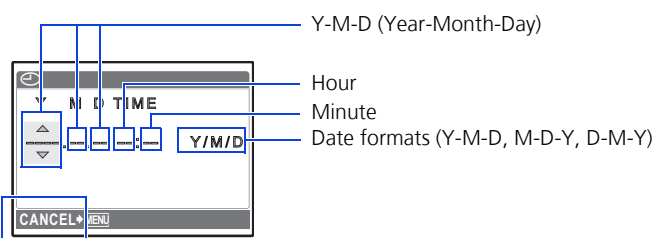

a. Press the button and the button to select [Y].  
• The first two digits of the year are fixed.

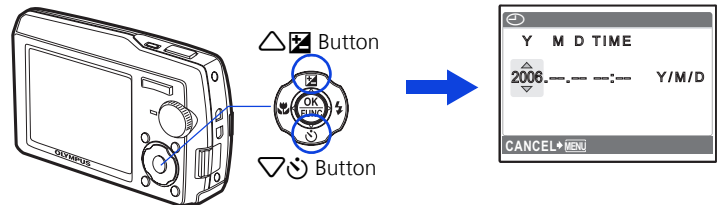

b. Press the button.

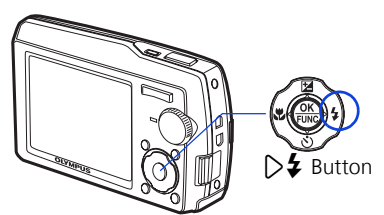

c. Press the button and the button to select [M].

d. Press the button.

e. Press the button and the button to select [D].


f. Press the button.

g. Press the button and the button to select "hour", "minute".  
• The time is displayed in the 24-hour format.

h. Press the button.

i. Press the button and the button to select [Y/M/D].

j. After all items have been set, press the button.  
• For precise time setting, press the button as the time signal strikes 00 seconds.

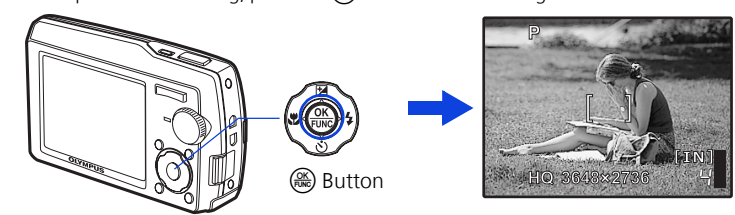


## 5 Take a picture


### a. Hold the camera



### b. Focus

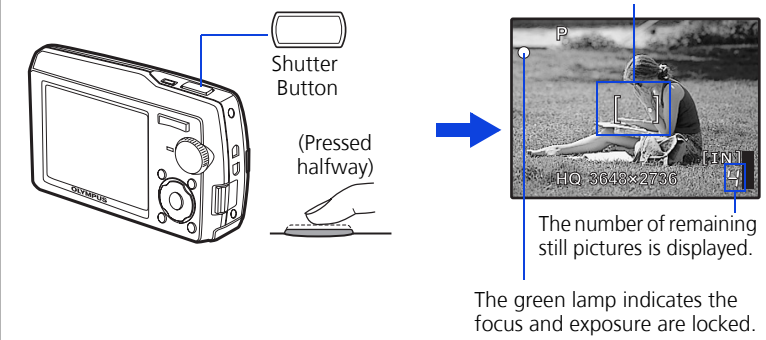


### c. Shoot

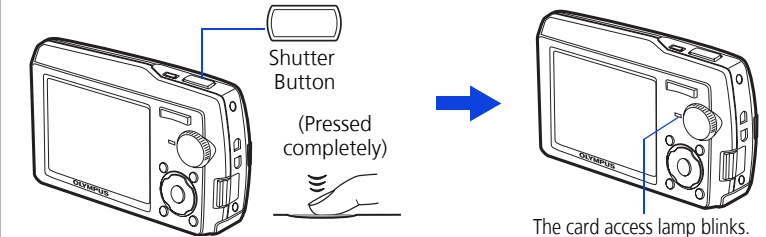


## 6 Review your pictures

### a. Set the mode dial to

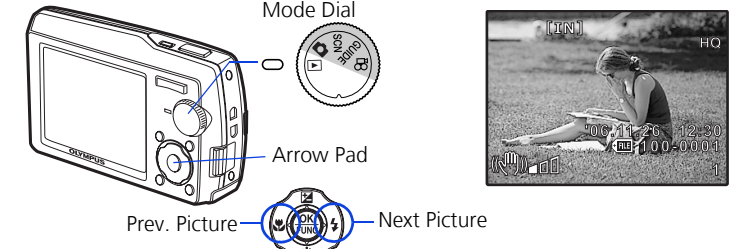

### Erase pictures

a. As described in a. above, display the picture you want to erase.  
b. Press the button.

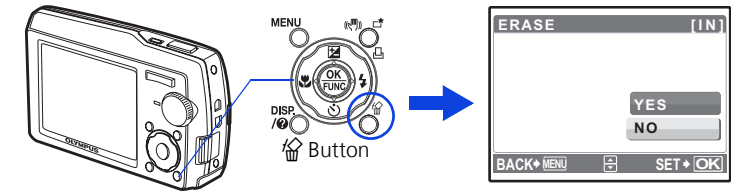

c. Press the button to select [YES] and press the button to erase the image.

